


Receptacle, Schuko**RN-RF16**


Rated for 250 V~ 50 Hz 16 A

INSTALLATION

1. Turn power OFF. Remove old receptacle and disconnect all wires.
2. Trim or strip backbox wires to 11 mm.
3. Unscrew and remove front plate.

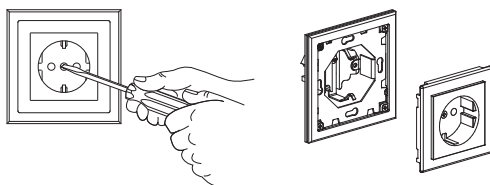

4. **Ground Wire:** Connect green/yellow or bare ground wire from backbox to the center screw. Tighten securely.

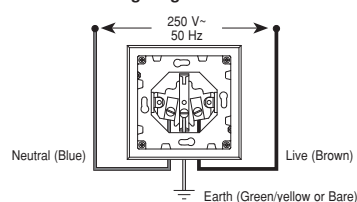Wiring Diagram

5. Connect neutral (blue) wire(s) to the screw marked N. Tighten securely. Connect live (brown) wire(s) to the screw marked L. Tighten securely.
6. Push wires into backbox. Do not pinch wires.
7. Mount receptacle to backbox.
8. Screw on front plate.
9. Restore power.


TV/SAT/FM Socket**RN-TVCA**

Television, satellite, and FM socket.

INSTALLATION


1. Prepare Socket for installation.

- Remove frame.
- Remove front plate.

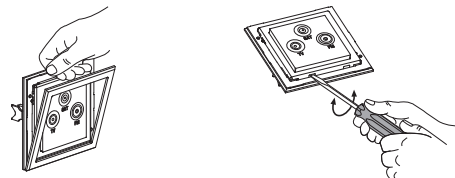

2. Wire the Socket.

- Strip 10 mm of outer insulation. Strip 8 mm of inner insulation.
- Fully insert each wire into the terminal block.
- Tighten terminal block screws (3).

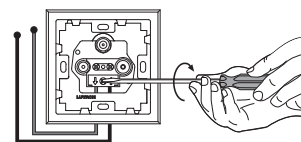Wiring Diagram

3. Mount the Socket using the mounting screws or the mounting claws.
4. Snap on front plate and frame.

**Technical Assistance**

If you have questions concerning the installation or operation of this product, call Lutron s Headquarters. Please provide exact model number when calling.

Lutron EA LTD

FREEPHONE: 900 974452 (Spain)
FREEPHONE: 0800 282107 (U.K.)
Monday thru Friday 08:00 - 20:00 CET
Saturday and Sunday 10:00 - 20:00 CET
Tel: +44 (0) 207 702 0657
Fax: +44 (0) 207 480 6899
www.lutron.com/europe

Lutron GL LTD

Tel: +852-2104-7733
Fax: +852-2104-7633
www.lutron.com/asia


Phone Jack, RJ11**RN-PHONE**

Four conductor phone jack for use in 2 or 4 wire phone installations.

INSTALLATION


1. Prepare Phone Jack for installation.

- Remove frame.
- Remove front plate.

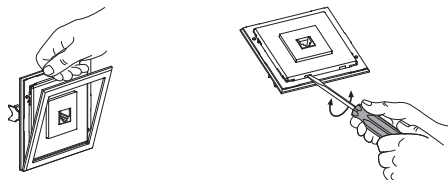


2. Wire the Phone Jack. Attach colored wire from wall to corresponding screws on back of Phone Jack. For 2 wire installations, some screws will not be used.

- Trim or strip backbox wires to 11 mm.
- Match colors.
- Wrap bare wire under screw head.
- Tighten screws.



3. Mount the Phone Jack using the mounting screws or the mounting claws.
4. Snap on front plate and frame.

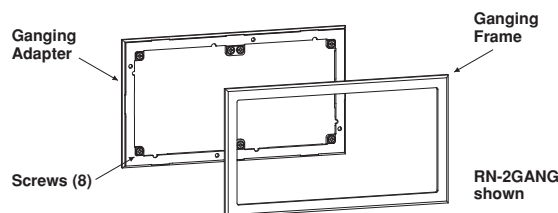**Multigang Frames****RN-2GANG, RN-3GANG****INSTALLATION**

1. Separate Ganging Frame from Ganging Adapter.
2. Remove single frames, front plates, and adapters from products to be ganged together.
3. Install products following their installation instructions.
 - Leave the front plates of the products off until Ganging Frame is mounted.
 - Leave product mounting screws loose until Ganging Frame is mounted.
4. Screw on Ganging Adapter.
5. Tighten dimmer mounting screws.
6. Mount front plates to the products following the installation instructions.
7. Snap on Ganging Frame.

Limited Warranty

Lutron EA Ltd. ("Lutron EA") warrants each unit to be free from defects in material and workmanship and to perform under normal use and service. To the extent permitted by law, Lutron EA and Lutron Electronics Co. Inc. ("Lutron") make no warranties or representations as to the units except as set forth herein. This warranty shall run for a period of two years from the date of purchase and Lutron's obligations under this warranty are limited to remedying any defect, replacing any defective part or replacement (at Lutron EA's sole option) and shall be effective only if the defective unit is shipped to Lutron EA postage prepaid within 24 months after purchase of the unit. Repair or replacement of the unit does not affect the expiry date of the warranty. This warranty does not cover damage or deficiencies due to abuse, misuse, inadequate wiring or insulation or use or installation other than in accordance with instructions accompanying the unit.

To the extent permitted by law, neither Lutron EA nor Lutron shall be liable for any other loss or damage including consequential or special loss or damages, loss of profits, loss of income, or loss of contracts arising out of or relating to the supply of the unit or the use of the unit and the purchaser assumes and will hold harmless Lutron EA and Lutron in respect of all such loss or damage. Nothing in this warranty shall have the effect of limiting or excluding Lutron EA's or Lutron's liability for fraud or for death or personal injury resulting from its own negligence, or any other liability, if and to the extent that the same may not be limited or excluded as a matter of law.

This warranty does not affect the statutory rights of consumer purchasers of this product. Although every attempt is made to ensure that catalogue information is accurate and up-to-date, please check with Lutron EA before specifying or purchasing this equipment to confirm availability, exact specifications, and suitability for your application. Lutron is a registered trademark in the United Kingdom and the Community Trademark System.

© 2006 Lutron Electronics Co., Inc.

Lutron EA Ltd.
Lutron House
6 Sovereign Close
Wapping, London E1W 3JF, England

Lutron GL Ltd.
Room 2808, 28/F
248 Queen's Road East
Wanchai, Hong Kong


Made and printed in U.S.A.
1/06 P/N 030-887 Rev. A

Електрична розетка двополюсна з**заземлюючим контактом****RN-RF16**


Номинальна напруга 250 Вг; 50 Гц; 16 А

Інсталяція

1. Відключіть живлення. Видаліть попередню розетку та від'єднайте всі проводи.
2. Зніміть ізоляцію провoda до 11 мм.

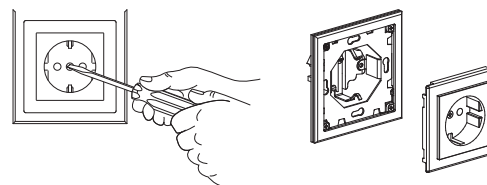

4. Провід заземлення: під'єднайте зелений/жовтий або без ізоляції кабель задньої панелі вимикача й надійно затягніть гвинтом в центрі.

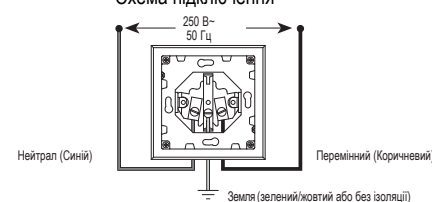Схема підключення

5. З'єднайте й надійно затягніть гвинтом нейтральний (синій) провід з контактом N. З'єднайте й надійно затягніть гвинтом переми́нний (коричневий) провід з контактом L.
9. Сховайте проводи в посадочній коробці. Не торкайтесь проводів.
7. Прикріпіть лицьову панель.
8. Затягніть гвинти кріплення.
9. Увімкніть напругу.


Розетка TV/SAT/FM**RN-TVCA**

TV, SAT та FM роз'єми.

Інсталяція:


1. Підготовка розетки до інсталяції.

- Зняти рамку
- Зняти лицьову панель

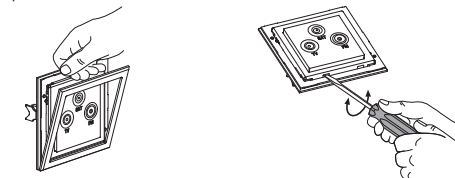

2. Під'єднання проводів:

- Зніміть зовнішню ізоляцію провoda до 10 мм та внутрішню до 8 мм.
- Зачищена частина провoda затискається гвинтами в місцях з'єднання

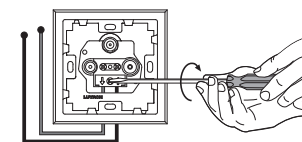Схема підключення

3. З'єднайте лицьову панель за допомогою гвинтів кріплення або рапорних лапок
4. Сумістіть лицьову панель з рамкою

**Технічна підтримка.**

З питань правильного вибору та інсталяції можна звернутися до служби технічної підтримки Вашого регіону.

Lutron EA Ltd.

Lutron House
6 Sovereign Close Wapping, London
E1W 3JF, England.
www.lutron.com/europe

Karma Digital


Lutron House
вул. Бориславська, 51
м. Київ, 03061 Україна.
телефон/факс: (044) 4089441
www.karma.kiev.ua

Телефонна розетка, RJ11**RN-PHONE**

Чотири контакти для підключення 2- або 4- провідних пристроїв.

ІНСТАЛЯЦІЯ

- Зняти рамку
- Зняти лицьову панель

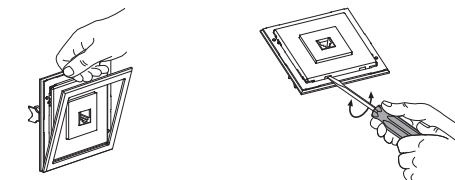


2. Підключення телефонної розетки.

З'єднайте кольоровий провід від стіни з відповідними гвинтами на задній стінці телефонної розетки. При з'єднанні 2-провідного пристрою кілька гвинтів не буде використовуватись.

- Зніміть ізоляцію провoda до 11 мм.
- Ідентифікуйте кабель за кольором.
- Зачищена частина провoda затискається гвинтами в місцях з'єднання
- Затягніть гвинти кріплення



3. З'єднайте лицьову панель за допомогою гвинтів кріплення або рапорних лапок
4. Сумістіть лицьову панель з рамкою

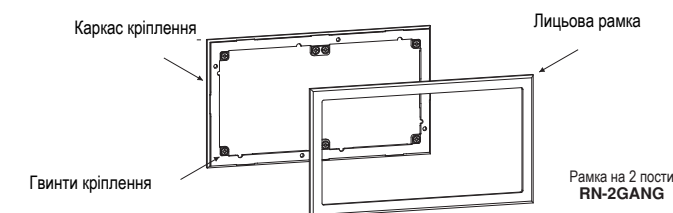**Інсталяційні рамки****RN-2GANG, RN-3GANG****Інсталяція:**

1. Від'єднайте каркас кріплення від лицьової рамки.
2. Зніміть індивідуальні рамки, лицьові панелі й каркас з пристроїв, які збираєтесь встановити поруч.
3. Встановіть пристрій, дотримуючись інструкції з інсталяції:
 - Не встановлюйте лицьову панель, поки пристрій встановлюється в рамку
 - Не затискайте гвинтами кріплення, поки пристрій встановлюється в рамку
4. Затягніть гвинтами кріплення каркас кріплення загальної рамки.
6. З'єднайте лицьові панелі всіх пристроїв.
7. Закріпіть лицьову рамку.